


## Aluminum lift hinge – how to adjust the angle.

After installing the lift hinge, onto the wall, you have to adjust the hinge closing angle.

This is done by tightening 2 inset screws located at the bottom of the lift hinge.

Find the 2 inset screws. (Photo A)  
Located at the bottom of the hinge.

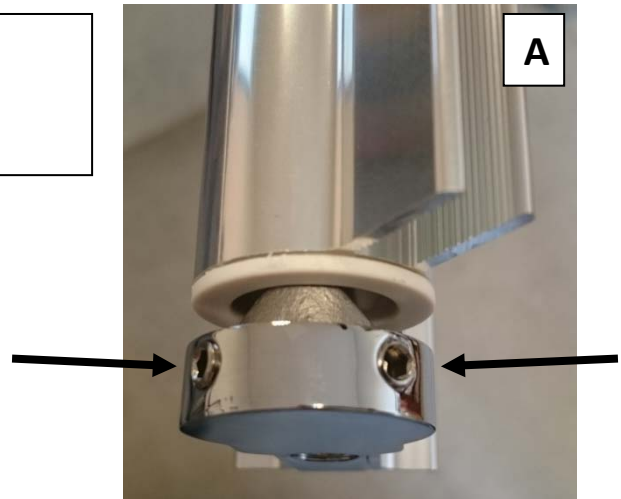

### How to adjust the angle:

- 1<sup>st</sup>. If the 2 screws are not already loose you have to loosen the screws.
- 2<sup>nd</sup>. Turn the hinge to the desired angle – make sure the long glass profile sits onto the inside wedge – as on below photo B.
- 3<sup>rd</sup>. When you have a state similar to the photo B with the desired closing angle - tighten both inset screws to keep and hold the angle.

